

## LIMITED WARRANTY

ADESSO provides one year limited warranty for the quality of all its products in materials and workmanship.

During this period, ADESSO will repair or replace all merchandise, which proved to be defective. However, ADESSO will not warranty any product which has been subjected to improper freight Handling, shipping abuse, neglect or unauthorized repair or installation. The warranty also will not cover products installed with Non-ADESSO components and product with broken sealed and assembly trace. After replacement of RMA, ADESSO reserves the right to request the total cost of the replacement products with broken seals or assembly trace.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period with transportation charges pre-paid to Adesso. You must contact Adesso at [support@adesso.com](mailto:support@adesso.com) for a Return Merchandise Authorization number (RMA) prior to returning any product. For each product returned for warranty service, please include your name, shipping address (no P.O. Box), telephone number, copy of the bill of sale as proof of purchase and have the package clearly marked with your RMA number.

## SUPPORT

### Website Support:

We have listed most of our FAQ's (Frequently Asked Questions) at:

<http://www.adesso.com/faqs.asp>.

Please visit our FAQ Service & Support pages before you contact our E-mail or Telephone Support.

### Email Support:

If our FAQ's do not help you resolve your issues, please email [support@adesso.com](mailto:support@adesso.com)

### Telephone Support:

**Toll Free:** (800) 467-1195  
9:00AM to 6:00PM PST Monday - Friday.



Adesso Inc.

160 Commerce Way  
Walnut, CA 91789  
Phone (909) 839-2929  
Fax (909) 839-2930  
[www.adesso.com](http://www.adesso.com)



USER'S GUIDE



Slimmedia Mini  
Keyboard

MODEL: AKB-2300MAC

## INTRODUCTION

The Adesso Mac Slimmedia Mini keyboard for Mac takes its inspiration from Apple's distinctive, contemporary approach to design. Inside its low-profile form, the keyboard is packed with performance and convenience functions. Low-travel, high quality membrane key switches delivers a crisp, responsive touch for faster typing. And multimedia hot keys provide intuitive, one-button control of audio playback & web browsing.

## FEATURES

- Slim Compact Design.
- Instant access to Multimedia, Internet and Application functions.
- Bus Power USB with 2 downstream ports.
- Membrane tactile keys lets you work longer in comfort.

## REQUIREMENTS

- MAC OS 9x/OS X (Jaguar & Tiger)
- Available USB1.1 or greater port
- CD-ROM Drive

**Note:** To use the PgUp, PgDn, Home & End keys, you must first press the control key (⌘) then the corresponding key. For instance, the UP arrow key becomes the PgUp key, the DOWN arrow becomes the PgDn key, the LEFT arrow becomes the Home key and the RIGHT arrow becomes the END key.

## MEDIAKEY INSTALLATION

1. Insert the **Driver CD** included in your package into your CD-ROM drive.
2. Double-Click the **CD-ROM icon** when it appears on your desktop.
3. Double click the **Mediakey Driver** icon
4. Double-Click the **Mediakey Installer** to begin the installation. Follow on screen instructions and press "continue" to proceed.
5. Choose your **volume drive** to install to such as your hard drive. System Installer should begin to install your driver in the designated directory you specified.
6. When installation is complete, you will be prompted to restart your computer. Click "**restart**" to restart.

The driver will automatically set the keys to your default application.

## DRIVER DOWNLOAD













You can also download the drivers for your Keyboard Hot Keys from our drivers section:

[www.adesso.com/drivers/akb2300MAC.dmg](http://www.adesso.com/drivers/akb2300MAC.dmg)

## MEDIAKEY UNINSTALLATION

1. Insert the **Driver CD** included in your package into your CD-ROM drive.
2. Double-Click the **CD-ROM icon** when it appears on your desktop.
3. Double click the **Mediakey Driver** icon
4. Double-Click the **Mediakey Un-installer** to begin the un-installation. Follow on screen instructions and press "**remove**" to uninstall.
5. When un-installation is complete, you will be prompted to restart your computer. Click "**restart**" to restart.

## HOTKEYS DESCRIPTION

Function Name	Function Description
 Web/Home	Starts the default Web browser and goes to the home page
 Favorite	Opens the Internet browser Favorites pane.
 Refresh	Updates the Information on an active Web page.
 Stop	Stops loading or refreshing a Web page
 Print	Print documents
 Email	Starts the default e-mail program.
 Play/pause	Switches between Play and Pause of media. Once Pause is pressed, pressing this button again resumes play.
 Stop	Stops playing the media.
 Pre-track	Switches to the previous media track.
 Next track	Switches to the next media track.
 calculator	Launch the Calculator
 sleep	Go to Sleep Mode